

SIZING CHART

TO FIND THE PERFECT DISTINK™ CORNER SHOWER DOOR





Determine the space needed for your door and return panel.

Width: A = _____

Width: B = _____

IMPORTANT: Use the larger width.

Depth: C = _____

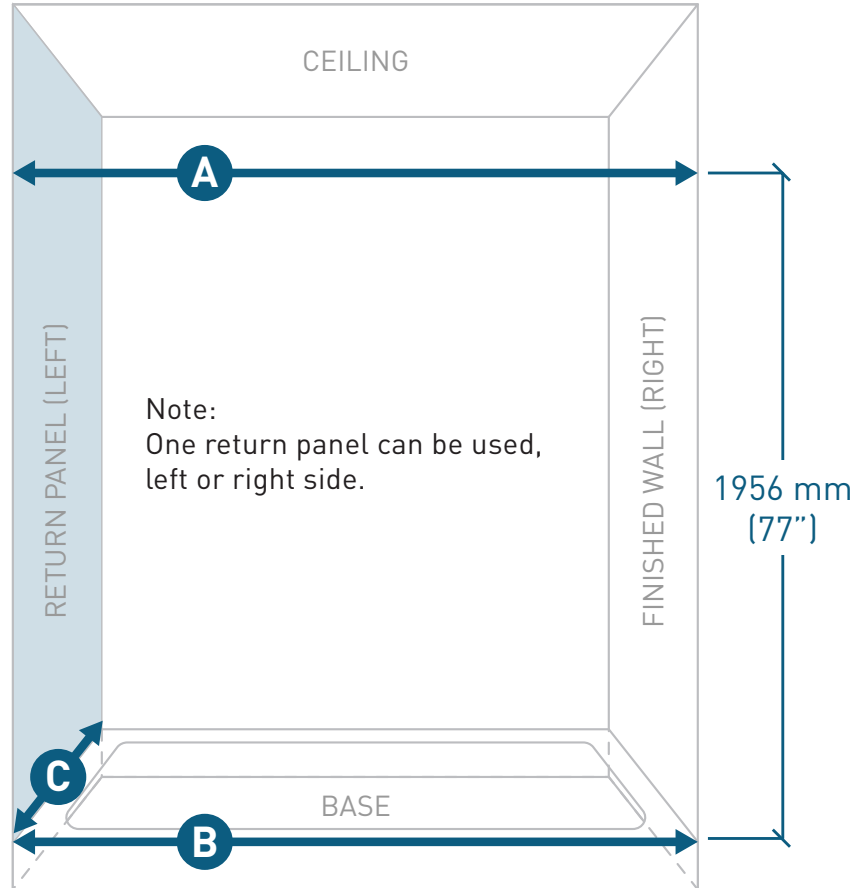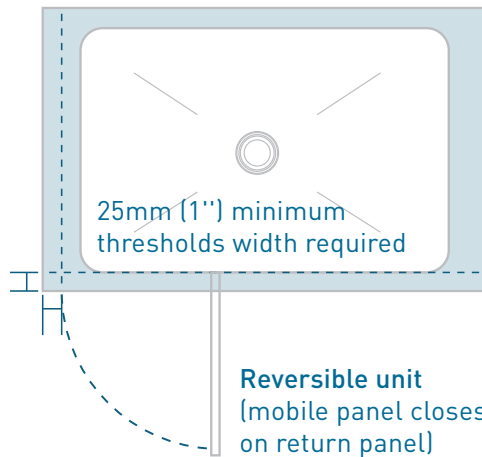

Note: left-opening door shown

Depth: C	Width: A or B				
	from 826 to 978 mm (from 32 1/2" to 38 1/2")	> 978 to 1131 mm (> 38 1/2" to 44 1/2")	> 1131 to 1283 mm (> 44 1/2" to 50 1/2")	> 1283 to 1435 mm (> 50 1/2" to 56 1/2")	> 1435 to 1588 mm (> 56 1/2" to 62 1/2")
from 775 to 794 mm (from 30 1/2" to 31 1/4")	DR1743 + DR1748	DR1744 + DR1748	DR1745 + DR1748	DR1746 + DR1748	DR1747 + DR1748
from 877 to 896 mm (from 34 1/2" to 35 1/4")	DR1743 + DR1749	DR1744 + DR1749	DR1745 + DR1749	DR1746 + DR1749	DR1747 + DR1749

> = higher than

Eg.: if your larger width is: **38 1/2"** and your depth is: **35"** the shower door and return panel that suit you are:
DR1743 + DR1749

